


Daily

- Visually inspect the pads for bowing and sagging or dry streaks.
- Dry the pads completely every 24 hours.
- Inspect the sump, remove any debris and make sure the water level is correct.
- Check the water distribution system for leaks and clogged water distributor holes.

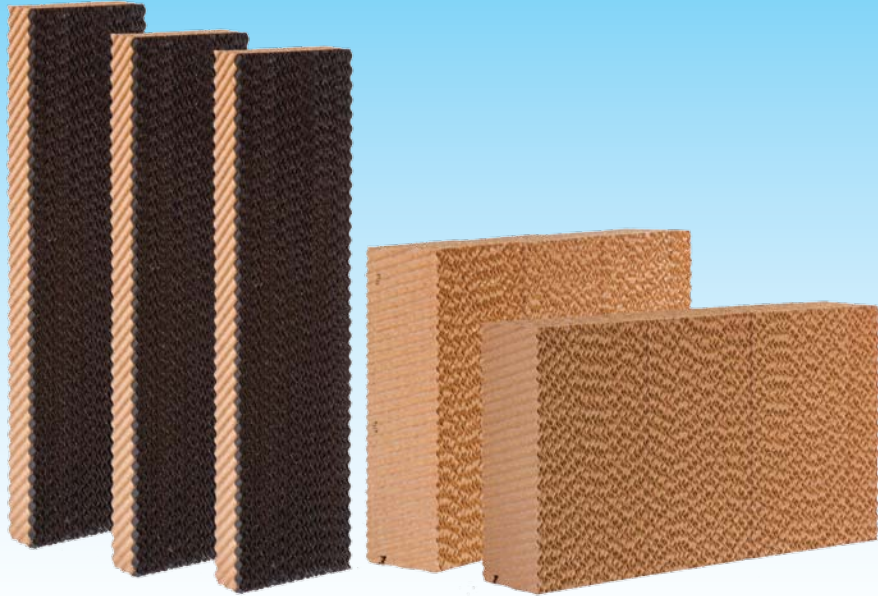

KÜÜL® PADS

Visit www.kuulpads.com
or call

1-800-695-2942 ■ 936-598-5651

Weekly

- Check bleed-off rate and adjust if necessary
- Check water flow rate and adjust if necessary
- Check pumps and clean any debris from the inlet

Quarterly

- Drain and disinfect the entire water distribution system.

How to Maximize Pad Life...

Scale Control

- Maintain a pH between 6 and 9. Optimal is 7.
- Make sure the flow of water is even from one end of the water spray bar to the other
- Water flow should be 1.5 gallons per minutes per square foot of top surface area. Use plenty of bleed-off.

Algae Control

- Shade the pads and sump.
- Allow the pads to dry out completely every 24 hours
- Avoid contaminants from contacting the pads and water. Dust, fumes, fertilizer, phosphates, etc. provide nutrients for algae growth.

General Rules

- Do not cycle the pump. This will cause the pads to wear out prematurely.
- Use chemicals to clean and disinfect **ONLY**.

KÜÜL® pads are Manufactured by Port-A-Cool, LLC, in the U.S.A.

Revised: September 29, 2010